
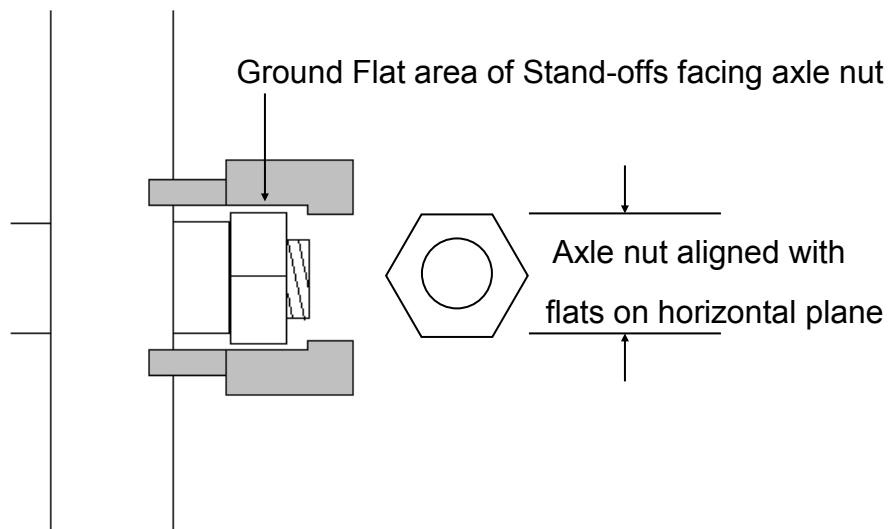


Safe·t mate[®] Adapter Kit # SM2-2TX4AK

Reduced Clearance Stand-offs for mounting SM2-2

1. Align axle nut so flats are parallel on the horizontal plane.
2. Place stand-offs with ground flat area facing axle nut.

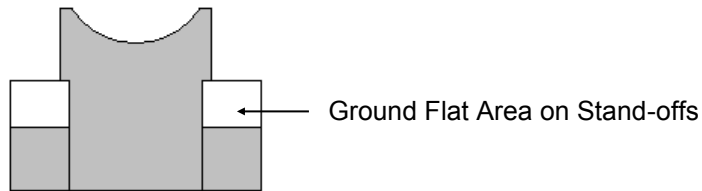

In some cases it may be necessary to remove axle bolt, reverse and